


## Type 6430

3/2-way solenoid valve  
3/2-Wege-Magnetventil  
Électrovanne 3/2 voies

Operating Instructions

Bedienungsanleitung  
Manuel d'utilisation

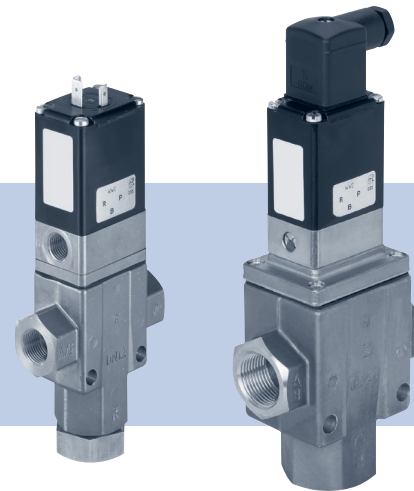

## Table of contents

1	Operating instructions .....	2
2	Intended use .....	3
3	Basic safety instructions .....	3
4	Technical data .....	5
5	Installation .....	7
6	Maintenance, troubleshooting .....	11
7	Spare parts.....	13
8	Transportation, storage, disposal .....	14

## 1 OPERATING INSTRUCTIONS

The operating instructions contain important information.

- ▶ Carefully read the operating instructions and follow the safety instructions.
- ▶ The operating instructions must be available to each user.
- ▶ Liability and warranty for the device will be invalidated if the operating instructions are not followed.

### 1.1 Symbols

Warning of injuries:



**DANGER!**

Imminent danger! Serious or fatal injuries.



**WARNING!**

Potential danger! Serious or fatal injuries.



**CAUTION!**

Danger! Moderate or minor injuries.

Warning of damage:

**NOTE!**

---

Other symbols:



highlights important tips and recommendations.



refers to information in these operating instructions or in other documentation.

▶ highlights instructions to avoid a danger.

→ highlights a procedure which you must carry out.

## 2 INTENDED USE

**Unauthorised use of the Type 6430 solenoid valve may be dangerous to people, nearby equipment and the environment.**

- ▶ The device is designed for controlling, shutting off and dosing neutral media.
- ▶ If devices are explosion-protected (see type label or additional plate), also follow the operating instructions for the coil/pilot control.
- ▶ With a properly connected and assembled cable plug, e.g. Bürkert Type 2518, the device complies with degree of protection IP65 in accordance with DIN EN 60529/IEC 60529.
- ▶ When using the device, observe the authorised data, operating conditions and deployment conditions specified in the contract documents and in the operating instructions.
- ▶ Prerequisites for safe and trouble-free operation are correct transportation, correct storage and installation as well as careful operation and maintenance.
- ▶ Only use the device as intended.

## 2.1 Definition of terms

In these operating instructions the term “device” designates the Type 6430 solenoid valve.

## 3 BASIC SAFETY INSTRUCTIONS

These safety instructions do not make allowance for any contingencies and events which may arise during installation, operation and maintenance.



**Risk of injury from high pressure.**

- ▶ Before loosening lines and valves, switch off the pressure! Vent or empty the lines.

**Risk of injury due to electric shock.**

- ▶ Before working on the device or system, switch off the power supply. Secure against reactivation.
- ▶ Observe the applicable accident prevention and safety regulations for electrical devices.



**Risk of burns and fire due to hot device surface if device operated continuously.**

- ▶ Do not touch the device unless wearing suitable protective gloves.
- ▶ Keep the device away from highly flammable substances and media.

**Risk of injury due to malfunctioning valves which operate with alternating voltage (AC).**

If the magnetic core sticks, the solenoid will overheat and cause the valve to malfunction.

- ▶ Monitor valve function.

**Risk of short-circuit/escape of medium due to leaking fittings.**

- ▶ Check that seals are correctly fitted.
- ▶ Carefully screw valve and connection lines together.



**General hazardous situations.**

To prevent injuries, observe the following:

- ▶ Use the device only when it is in perfect condition and in accordance with the operating instructions.

- ▶ Do not modify the device.
- ▶ Secure device or plant to prevent unintentional activation.
- ▶ Only trained technicians may perform installation and maintenance work.
- ▶ Following interruption of the process, ensure that the process is restarted in a controlled manner.
- ▶ Do not mechanically load housing.
- ▶ Observe the general rules of technology.

## 4 TECHNICAL DATA

### 4.1 Operating conditions



The following values are indicated on the type label:

- Voltage (tolerance  $\pm 10\%$ ) / current type
- Coil power (active power in W - at operating temperature)
- Pressure range<sup>1)</sup>
- Body material: Brass (MS), gunmetal (RG)
- Seal material: NBR (BB), PUR+NBR (PB), FKM (FF), EPDM (AA)

<sup>1)</sup> The **version controlled by external air** requires auxiliary pilot air to be at least 2 bar above operating pressure.  
The **vacuum version** requires a minimum pressure difference of 0.5 bar and is suitable for rough vacuum only.

### Circuit functions 3/2-way valve Type 6430

Standard device / vacuum version			
<b>C (NC)</b>		<b>D (NO)</b>	
Standard device / vacuum version as pulse valve			
<b>C (NC)</b>			
Version controlled by external air			
<b>C (NC)</b>		<b>D (NO)</b>	

→ For vacuum operation connect the vacuum pump to connection 3 (R).

Protection class: IP65 according to DIN EN 60529 / IEC 60529 with correctly connected and mounted cable plug, e.g. Bürkert Type 2518

## 4.2 Usage conditions

Ambient temperature: 0...+55 °C  
–20...+55 °C for seal material EPDM

Permitted medium temperature and permitted media depending on the seal material:

Seal material	Medium temperature	Permitted media	
		Standard device	Vacuum version and version controlled by external air
NBR	0 °C...+80 °C	Neutral media as compressed air, water, low-viscosity oils	Neutral gases, compressed air, vacuum
PUR/NBR	0 °C...+80 °C		
FKM	0 °C...+90 °C	Oil and grease-free media, cold and hot water	
EPDM	–20 °C...+90 °C		

Viscosity (standard device): 21 mm<sup>2</sup>/s

Operating duration:

Unless otherwise specified on the type label, the solenoid system is suitable for continuous operation.

Service life:

High switching frequency and high pressures will reduce the service life.



Important information to ensure functional reliability during continuous operation!

During a long downtime it is recommended to actuate at least 1–2 switching operations per day.



Liquids and high differential pressure may cause violent water hammers.


## 4.3 Conformity

The device conforms to the EU directives as per the EU Declaration of Conformity (if applicable).

## 4.4 Standards

The applied standards, which are used to demonstrate conformity with the directives, are listed in the EU type examination certificate and/or the EU Declaration of Conformity (if applicable).

## 4.5 Type label

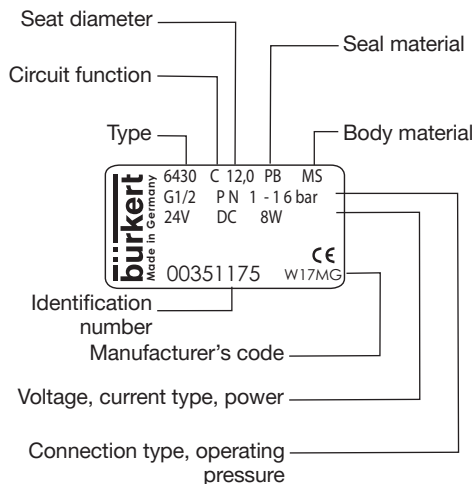

## 5 INSTALLATION



### DANGER!

**Risk of injury from high pressure.**

- Before loosening lines and valves, switch off the pressure! Vent or empty the lines.

**Risk of injury due to electric shock.**

- Before working on the device or system, switch off the power supply. Secure against reactivation.
- Observe the applicable accident prevention and safety regulations for electrical devices.



### WARNING!

**Risk of injury due to improper installation.**


- Installation may be carried out by authorised technicians only and with the appropriate tools.

**Risk of injury due to unintentional activation of the system and uncontrolled restart.**

- Secure the system against unintentional activation.
- Following installation, ensure a controlled restart.

## 5.1 Before installation

- Check pipelines for soiling and clean if required.
- Install a dirt trap upstream of the valve inlet ( $\leq 500 \mu\text{m}$ ).



## 5.2 Installation

Any installation position, preferably actuator face up.

### NOTE!

- ▶ Ensure that the valve body is not installed twisted.
- ▶ Ensure that seal material does not get into the device.

### Caution! Risk of breakage!


- ▶ Do not use the solenoid as a lever arm.

- Hold the device on the body using an open-end wrench and screw into the pipeline.
- Observe pin assignment according to switching function and identification.

## 5.3 Manual override

### NOTE!

Caution! When manual override is locked, the valve can no longer be electrically actuated.

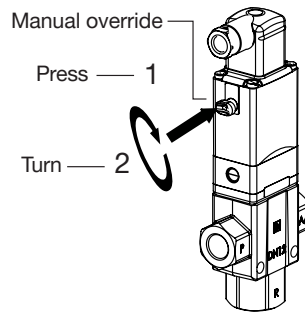



## 5.4 Electrical connection of cable plug



### WARNING!

#### Risk of injury due to electric shock.


- ▶ Before working on the device or system, switch off the power supply. Secure against reactivation.
- ▶ Observe the applicable accident prevention and safety regulations for electrical devices.

#### Risk of electric shock if protective conductor not connected.

- ▶ Always connect protective conductor and check electrical continuity between solenoid and body.



Observe specifications on the type label regarding voltage and current type.

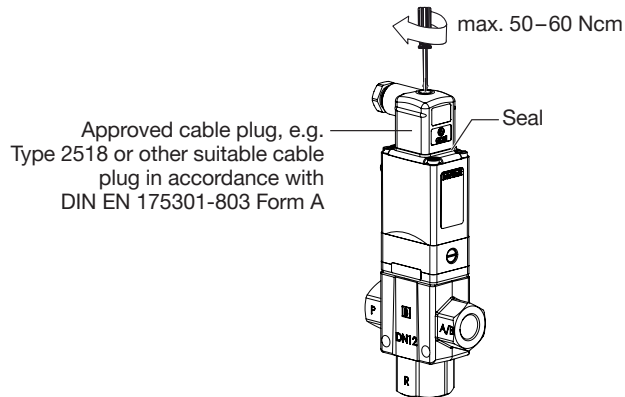

- Screw cable plug tight (approved types see data sheet), ensuring a torque of 50–60 Ncm.
- Check that the seal is correctly fitted.
- Connect protective conductor and check electrical continuity between solenoid and body.

### 5.4.1 Electrical connection of pulse valve (CF02)

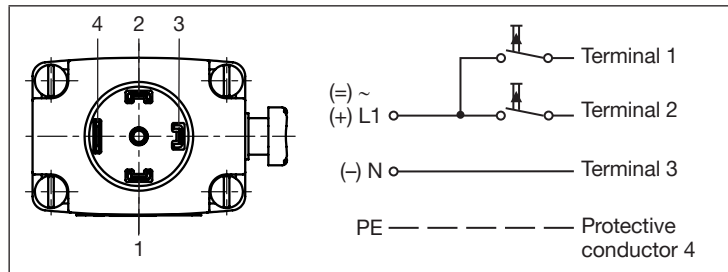



Fig. 1: Circuit diagram connection of pulse valve

 The connection terminals in the cable plug are identified with the numerals 1 to 3 according to the terminals on the valve.

- Connect **pulse valves** (variable code CF 02) as shown in [“Fig. 1”](#). Pulse on Terminal 1 closes the valve, pulse on Terminal 2 opens the valve.
- Connect **standard devices** L1/+ and N/- to terminals 1 and 2 independently of the polarity.

### NOTE!

#### Important information:

- ▶ Avoid pulses from being simultaneously generated on both coil windings.
- ▶ Other consumers (e.g. relays) must not be switched parallel to the terminals.
- ▶ The coil connection, which is not energised, must be electrically isolated (open).
- ▶ If 2 or more valves are switched in parallel, ensure that this requirement is met by using bipolar or multipolar switches.
- ▶ If versions feature a manual override, this can be used only to a limited extent.



Electrical connection of the position feedback (variable code LF02 or LF03) see operating instructions for Type 1060.

## 6 MAINTENANCE, TROUBLESHOOTING



### **DANGER!**

**Risk of injury from high pressure.**

- ▶ Before loosening lines and valves, switch off the pressure! Vent or empty the lines.

**Risk of injury due to electric shock.**

- ▶ Before working on the device or system, switch off the power supply. Secure against reactivation.
- ▶ Observe the applicable accident prevention and safety regulations for electrical devices.



### **WARNING!**

**Risk of injury due to improper maintenance work.**

- ▶ Maintenance may be carried out by authorised technicians only and with the appropriate tools.

**Risk of injury due to unintentional activation of the system and uncontrolled restart.**

- ▶ Secure the system against unintentional activation.
- ▶ Following maintenance, ensure a controlled restart.

### **NOTE!**

Explosion-proof versions may be repaired by the manufacturer only!

Sealed screws must not be opened!

## 6.1 Faults

The piston may have occupied a middle position during transportation.

**To move the piston to the end position:**

- Pressurise connection P and briefly close connection A/B.
- Press piston with your finger through connection R into the end position.

### **If faults occur, check whether**

- the device has been installed correctly
- the electrical connection and the fluid connection have been properly implemented
- the device is damaged
- all screws have been tightened
- voltage and pressure have been applied
- the pipelines are clean
- the power supply is strong enough
- there is adequate differential pressure
- the volume is adequate

### **Vacuum version and externally controlled version**

- **For vacuum operation** check whether a nominal diameter is used which corresponds to the pump capacity.
- **If a version is externally controlled**, check whether operating pressure and control pressure have been applied (pilot pressure must be at least 2 bar above operating pressure)

### **Valve does not switch**

Possible cause:

- Short-circuit or coil interrupted
- Inadequate power supply
- Interior of the valve soiled
- Medium pressure outside the permitted pressure range
- Manual override locked
- not enough differential pressure available
- the volume is not adequate

### **Valve does not close**

Possible cause:

- Interior of the valve soiled
- Manual override locked
- not enough differential pressure available
- the volume is not adequate

## 7 SPARE PARTS



### DANGER!

#### Escape of medium through leaking device.

If the O-rings are forgotten or incorrectly inserted when installing the pilot valve, the device will be damaged and medium will escape.

- Before screwing down the device, correctly insert the O-rings into the recesses.



### CAUTION!

#### Risk of injury and/or damage due to incorrect parts.

Incorrect accessories and unsuitable spare parts may cause injuries and damage the device and the area around it.

- Use only original accessories and original spare parts from Bürkert.

## 7.1 Ordering spare parts

2 spare-part sets are available for each device version (see Chapter [“7.2 Overview of spare parts”](#)).

Order the

**wearing part set SET 3** (Pos. 2) or the




**pilot control with solenoid** (Pos. 1)

quoting the identification number of the device.

The identification number of the device can be found on the type label (see also Chapter [“4.5” on page 7](#)).



## 7.2 Overview of spare parts

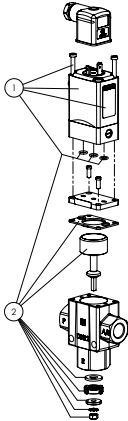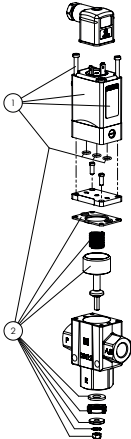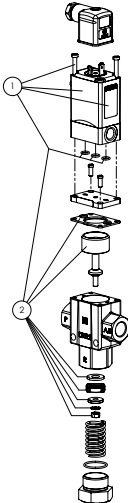Standard device Standard-Ausführung	Vacuum version Vakuum-Ausführung	Externally controlled version
		

## 8 TRANSPORTATION, STORAGE, DISPOSAL

### NOTE!

**Damage in transit due to inadequately protected devices.**

- ▶ Protect the device against moisture and dirt in shock-resistant packaging during transportation.
- ▶ Observe permitted storage temperature.

**Incorrect storage may damage the device.**

Permitted storage temperature  $-40...+80\text{ }^{\circ}\text{C}$ .

- ▶ Store the device in a dry and dust-free location.

**Damage to the environment caused by device parts contaminated with media.**

- ▶ Observe applicable disposal and environmental regulations.
- ▶ Dispose of the device and packaging in an environmentally friendly manner.
- ▶ Observe national waste disposal regulations.

→ Dispose of the device and packaging in an environmentally friendly manner.

## **По вопросам продаж и поддержки обращайтесь:**

Архангельск +7 (8182) 45-71-35

Астрахань +7 (8512) 99-46-80

Барнаул +7 (3852) 37-96-76

Белгород +7 (4722) 20-58-80

Брянск +7 (4832) 32-17-25

Владивосток +7 (4232) 49-26-85

Волгоград +7 (8442) 45-94-42

Екатеринбург +7 (343) 302-14-75

Ижевск +7 (3412) 20-90-75

Казань +7 (843) 207-19-05

Калуга +7 (4842) 33-35-03

Кемерово +7 (3842) 21-56-70

Киров +7 (8332) 20-58-70

Краснодар +7 (861) 238-86-59

Красноярск +7 (391) 989-82-67

Курск +7 (4712) 23-80-45

Липецк +7 (4742) 20-01-75

Магнитогорск +7 (3519) 51-02-81

Москва +7 (499) 404-24-72

Мурманск +7 (8152) 65-52-70

Наб.Челны +7 (8552) 91-01-32

Ниж.Новгород +7 (831) 200-34-65

Новосибирск +7 (383) 235-95-48

Омск +7 (381) 299-16-70

Орел +7 (4862) 22-23-86

Оренбург +7 (3532) 48-64-35

Пенза +7 (8412) 23-52-98

Пермь +7 (342) 233-81-65

Ростов-на-Дону +7 (863) 309-14-65

Рязань +7 (4912) 77-61-95

Самара +7 (846) 219-28-25

Санкт-Петербург +7 (812) 660-57-09

Саратов +7 (845) 239-86-35

Сочи +7 (862) 279-22-65

Ставрополь +7 (8652) 57-76-63

Сургут +7 (3462) 77-96-35

Тверь +7 (4822) 39-50-56

Томск +7 (3822) 48-95-05

Тула +7 (4872) 44-05-30

Тюмень +7 (3452) 56-94-75

Ульяновск +7 (8422) 42-51-95

Уфа +7 (347) 258-82-65

Хабаровск +7 (421) 292-95-69

Челябинск +7 (351) 277-89-65

Ярославль +7 (4852) 67-02-35

**сайт: [burkert.pro-solution.ru](http://burkert.pro-solution.ru) | эл. почта: [btk@pro-solution.ru](mailto:btk@pro-solution.ru)**

**телефон: 8 800 511 88 70**